

## WHAT TO DO IF...

**WARNING!**

Refer to the Safety chapters.

<b>Problem</b>	<b>Possible cause</b>	<b>Remedy</b>
The appliance does not operate.	The appliance is not activated.	Activate the appliance. Refer to the chapter "Daily Use".
The appliance does not operate.	The Minute Minder + End of Cooking programmer is not set.	Set the Minute Minder + End of Cooking programmer. Refer to the chapter "Clock functions".
The appliance does not operate.	The fuse in the fuse box is released.	Do a check of the fuse. If the fuse is released more than one time, contact a qualified electrician.
The oven lamp does not operate.	The oven lamp is defective.	Replace the oven lamp.

<b>Problem</b>	<b>Possible cause</b>	<b>Remedy</b>
Steam and condensation collect on the food and in the oven.	You left the dish in the oven for too long.	Do not keep the dishes in the oven for longer than 15 - 20 minutes after the cooking ends.
If you cannot find a solution to the problem yourself, contact your dealer or the service centre.		The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the appliance cavity.
We recommend that you write the data here:		
Model (MOD.)		.....
Product number (PNC)		.....
Serial number (S.N.)		.....