

## TROUBLE SHOOTING

Trouble phenomenals		Reasons	solutions
Can not ignite		The main gas valve not opened	Open the main gas valve
		Jet blocked	Dredge the jet
		The hose stave or bend	Change the hose or remove bend
		There is air in the hose when change cylinder	Repeat ignition for several times
		Put the saucer in wrong position	Correct the saucer position
Abnormal flame	Red flame	Air humidity and smoke is too big	Adjusting damper or waiting till humidity in the air gets less
	Yellow flame	Some feculence in the hole of burner cap	Clean the burner cap
		The gas in the cylinder is going out	Change the cylinder
	Backfire	Pressure is too low	Check whether there is gas in the cylinder and the valve has been opened or damaged
		Something overflow the hole of burner cap or there is feculence	Clean the burner cap
		Time of burning is too long	Pause and use again after cooling
Flame short	Gas pressure is too low	Check whether there is gas in the cylinder and the valve has been opened or damaged	